# CertainTeed



# **Drywall Corner**

### The NO-COAT<sup>®</sup> Structural Laminate (SLAM<sup>®</sup>) design represents a revolutionary drywall corner system that provides superior strength and durability, installs faster, and delivers bottom line savings in labor.

Mud applied, extra tough drywall corners that withstand severe impacts and settling. Won't blister, bubble or edge crack. Available in Outside and Inside 90°, Bullnose, L-Trim and Arch profiles.

- High-strength, tapered copolymer core
- · Severe impact resistance, will not dent
- · Corners will not separate from wall
- · Crisp sharp lines without ridges
- Withstands significant shifting due to lumber drying, settling, humidity and temperature differences
- Surface paper is perfect for applying paint and textures



## **Strong, Straight Edges**

- Outside 90 has a specially engineered profile that makes the boxing of the bead easier and faster
- Bullnose has a ridgeless radius that offers an easily paintable paper face that won't chip or crack and is scratch resistant
- L-Trim requires no masking allowing for a quick and clean finishing of exposed drywall edges and reveals for a perfect edge
- Arch beads conform to the radius to create a perfectly smooth and rounded corner without the need for glues or staples for installation

**Product Data** 

NO-COAT

NO-COAT

NO-COAT

DESCRIPTION:		CODE:	CODE:	PACKAGE SIZE:
NO-COAT Outside 90°	8'	315488	10800805154888	50 Sticks/Carton
NO-COAT Outside 90°	9'	315489	10800805154895	50 Sticks/Carton
NO-COAT Outside 90°	10'	315490	10800805154901	50 Sticks/Carton
NO-COAT Outside 90°	12'	315491	10800805154918	50 Sticks/Carton
NO-COAT Inside 90°	8'	315772	10800805157728	50 Sticks/Carton
NO-COAT Inside 90°	9'	318067	10800805157728	50 Sticks/Carton
NO-COAT Inside 90°	10'	318068	10800805157728	50 Sticks/Carton
NO-COAT Bullnose 3/8"	8'	315492	10800805154925	50 Sticks/Carton
NO-COAT Bullnose 3/8"	9'	315493	10800805154932	50 Sticks/Carton
NO-COAT Bullnose 3/8"	10'	315494	10800805154949	50 Sticks/Carton
NO-COAT Bullnose 3/4"	8'	318062	10800805180627	50 Sticks/Carton
NO-COAT Bullnose 3/4"	9'	318063	10800805180634	50 Sticks/Carton
NO-COAT Bullnose 3/4"	10'	318064	10800805180641	50 Sticks/Carton
NO-COAT L-Trim 1/2"	10'	315495	10800805154956	50 Sticks/Carton
NO-COAT L-Trim 5/8"	10'	315770	10800805157704	50 Sticks/Carton
NO-COAT Arch 3/4" Bullnose	10'	315496	10800805154963	10 Sticks/Carton
NO-COAT Arch Outside 90°	10'	315498	10800805154987	10 Sticks/Carton

CERTAINTEED

O INSIDE 90 8'

0

OUTSIDE 90 8

OTTOTAL DESIGN

**BULLNOSE 8**<sup>1</sup>

CAPTON

Distributed by:



Gypsum

# **NO-COAT**. Structural Laminate Drywall Corner System

### Installation Instructions

# Slam<sup>®</sup> Design Integrates New Technologies and Materials that Outperform All Others.

#### Outside 90

When installing drywall for 90° corners, hang Outside 90 as shown in Figure 1a.

Figure 1a

Figure 1b





#### Bullnose

When installing drywall for Bullnose corners, hang as shown in Figure. 2a, creating an open area for the radius of the bead. Ensure that drywall at the corners do not touch as shown in Figure 2b.

Figure 2a








#### CertainTeed Double Barrel Hopper


For use with NO-COAT inside, outside and bullnose corners and Flexible Corner rolls.

Accommodates all inside and outside angle without time-consuming part changeovers and reconfiguration.

### Features/Benefits:


• Eliminates part changes or reconfigurations handles both inside and outside angles.







- will be. Or use hopper to fill bead. 2. Place corner trim on wall, ensuring it is
- ceiling. Press into position.



- 3. Use the roller to embed the trim. pressure, running the knife over it at a 45° angle. Use the taping knife to skim over the edge with joint compound. Let dry thoroughly.
- Use the wider finishing knife to skim over the edge again. Let dry thoroughly. Lightly sand and paint.








- 1. Use the taping knife to apply joint compound to drywall, slightly beyond where the L-Trim will be. Or use hopper to fill bead.
- 2 Place L-Trim on wall. Press into position








- embed with a knife, using even pressure running at a 45° angle. Use the taping knife to skim over the L-Trim edge with joint compound. Let dry thoroughly.
- Use the wider finishing knife to skim over the L-Trim edge again. Let dry thoroughly. Lightly sand and paint

- · Single piece gates with ergonomic hand knob allow for fast and easy adjustments
- High density polyurethane tank and gate controllers
- Stainless steel reservoir trough and gates
- Dimension: 14" x 14" x 13.5"

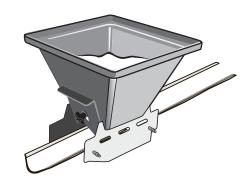

### ASK ABOUT ALL OF OUR OTHER CERTAINTEED® PRODUCTS AND SYSTEMS:

ROOFING • SIDING • TRIM • DECKING • RAILING • FENCE **GYPSUM • CEILINGS • INSULATION** 

http://blog.certainteed.com www.certainteed.com


CertainTeed Corporation 20 Moores Road Malvern, PA 19355

Professional: 800-233-8990 Consumer: 800-782-8777

© 06-2016 CertainTeed Gypsum, Inc. Printed in Canada on recycled paper. CTG-4143







apply joint compound

to drywall, slightly

beyond where the

edge of the corner

Or embed using even

